



Fleck 5600SXT Down fow



TABLE OF CONTENTS

JOB SPECIFICATION SHEET

1. Type of Timer:
2. Down fow: Up fow Up fow Variable
3. Meter Size:

4. System Type:

- units on and of line based on flow.
5. Timer Program Settings:

Brine Tank Reyll:

6. Drain Line Flow Control: _____ gpm
7. Brine Line Flow Controller: _____ gpm
8. Injector Size#: _____
9. Piston Type:

INSTALLATION

Water Pressure

Flow into the mineral tank. When water flow stops, slowly

Electrical Facilities

Existing Plumbing

iron filter unit should be installed ahead of the water softener.

Location Of Softener And Drain

breaks and back flow.

By-Pass Valves

CAUTION Water pressure is not to exceed 125 psi (8.6 bar), water temperature is not to exceed 110°F (43°C), and the unit cannot be subjected to freezing conditions.

Installation Instructions

making sure the unit is level and on a firm base.

should be a minimum of 1/2" (13 mm). Backwash flow rates

lines should be the same size as the drain line flow control.


distributor tube flush with the top of the tank.

connecting the Drain Line Flow Control fitting (DLFC).


Teflon tape is the only sealant to be used on the drain fitting. The drain from twin tank units may be run through a

Make sure that the floor is clean beneath the salt storage

plate. If a grid is not utilized, fill to the top of the air check

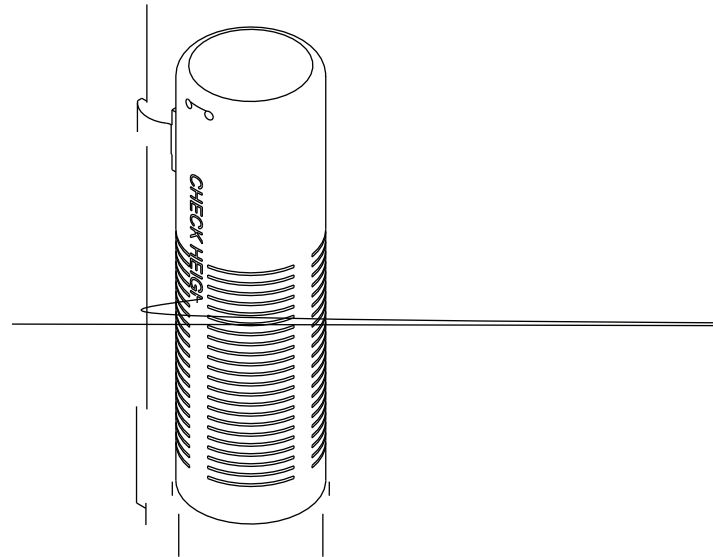

TIMER FEATURES

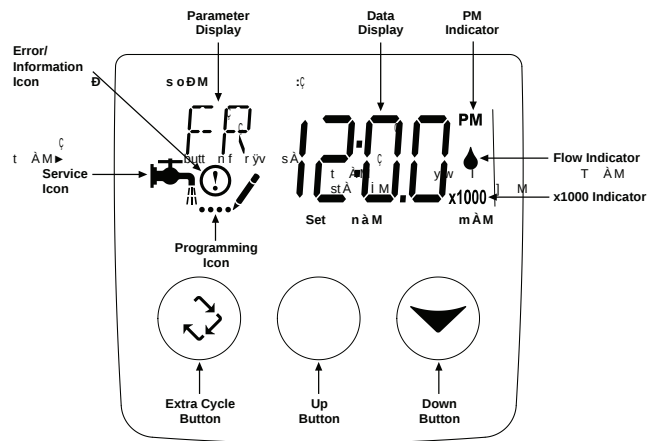

Queueing a Regeneration

Press the Extra Cycle button. The service icon will flash to

Regenerating Immediately

Press and hold the Extra Cycle button for five seconds.

TIMER OPERATION

Meter Immediate Control

Manually Initiating a Regeneration

Regeneration Cycle Step #4 (brine re  ll).

Meter Delayed Control

NOTE: If the unit is a filter or up flow, the cycle step order may change.

NOTE: A queued regeneration can be initiated by pressing the Extra Cycle button. To clear a queued regeneration, press the Extra Cycle button again to cancel. If regeneration occurs for any reason prior to the delayed regeneration time, the manual regeneration request shall be cleared.

Control Operation During A Power Failure

The SXT includes integral power backup. In the event of power

Time Clock Delayed Control

The system configuration settings are stored in a non-volatile memory and are stored indefinitely with or without line power. The Time of Day   ashes when there has been a power failure. Press any button to stop the Time of Day from   ashing.

Day of the Week Control

The schedule is defined in Master Programming by setting

specified regeneration time.

include all required safety components to prevent over  ows

Control Operation During Regeneration

number that displays   ashes until the valve completes driving

system should be setup with a sufficient reserve capacity to

Control Operation During Programming

MASTER PROGRAMMING MODE CHART

Caution: Before entering Master Programming, please contact your local professional water dealer.

[illegible]


MASTER PROGRAMMING MODE

Setting the Time of Day



5. Tank in Service (Display Code TS)

identified by $\hat{\text{TS}}$ in the upper left hand corner of the screen.

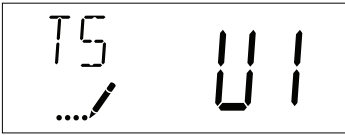


6. Unit Capacity (Display Code C)

Capacity. This setting specifies the treatment capacity of the of hardness when configuring a softener system, and in the desired volume capacity when configuring a $\ddot{\text{y}}$ lter system. This option setting is identified by $\hat{\text{C}}$ in the upper left hand corner



7. Feedwater Hardness (Display Code H)

per unit volume for softener systems, or 1 for $\ddot{\text{y}}$ lter systems. This option setting is identified by $\hat{\text{H}}$ in the upper left hand

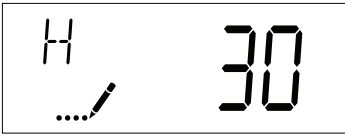

8. Reserve Selection (Display Code RS)

in your system. This setting is identified by $\hat{\text{RS}}$ in the upper


FS	Safety Factor



9. Safety Factor (Display Code SF)

Safety Factor. This setting specifies what percentage of the

volume. This option setting is identified by $\hat{\text{SF}}$ in the upper left

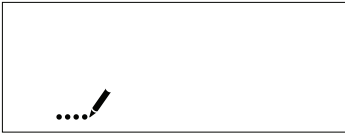

MASTER PROGRAMMING MODE

12. Regeneration Time

Regeneration Time. This setting speciïyes the time of day the triggered regeneration. This option setting is identiïyed by 'RT'



13. Regeneration Cycle Step Times


for the system, and are identiïyed by an abbreviation in the are listed below. If the system has been conïgured with the 'OTHER' valve type, the regeneration cycles will be identiïyed

Abbreviation	Cycle Step



14. Day of Week Settings

regeneration schedule for a system conïgured as a Day of Week control. The different days of the week are identiïyed as

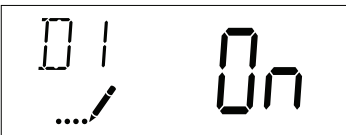

15. Current Day (Display Code CD)

day on systems that have been conïgured as Day of Week controls. This setting is identiïyed by 'CD' in the upper left-hand



USER PROGRAMMING MODE

User Programming Mode Options		
Abbreviation	Parameter	Description
		The fixed reserve capacity

NOTE: Some items may not be shown depending on timer configuration. The timer will discard any changes and exit User Mode if any button is not pressed for sixty seconds.

User Programming Mode Steps

Press the Up and Down buttons for five seconds while in setting is identified by `DO` in the upper left hand corner of



Regeneration Time. This option setting is identified by `RT`



DIAGNOSTIC PROGRAMMING MODE

Diagnostic Programming Mode Options		
Abbreviation	Parameter	Description
		Displays the current outlet flow rate
		Displays the highest flow

NOTE: Some items may not be shown depending on timer configuration. The timer will exit Diagnostic Mode after 60 seconds if no buttons are pressed. Press the Extra Cycle button to exit Diagnostic Mode at any time.

Diagnostic Programming Mode Steps

Press the Up and Extra Cycle buttons for five seconds

setting is identified by RC in the upper left hand corner of



Capacity. This option setting is identified by RC in the



Version. This option setting is identified by SV in the upper



Diagnostic Programming Mode Steps

Press the Up and Extra Cycle buttons for five seconds

setting is identified by FR in the upper left hand corner of




is identified by PF in the upper left hand corner of the




setting is identified by HR in the upper left hand corner of




is identified by VU in the upper left hand corner of the

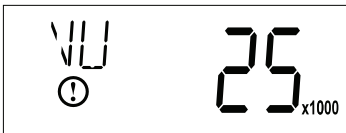



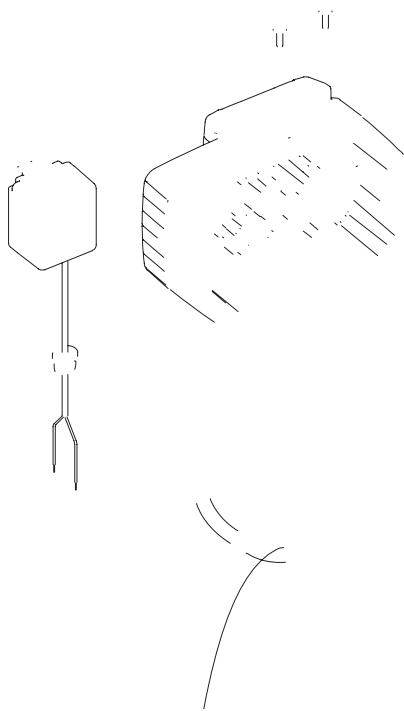


3/4" TURBINE METER ASSEMBLY

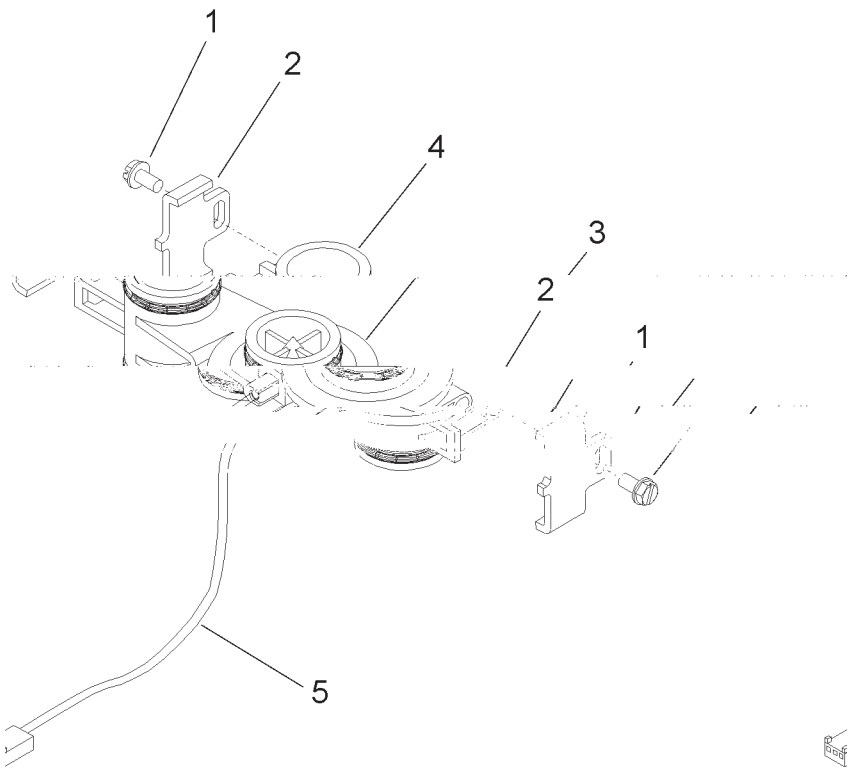


Item No.	QTY	Part No.	Description
----------	-----	----------	-------------

BYPASS VALVE ASSEMBLY (PLASTIC)

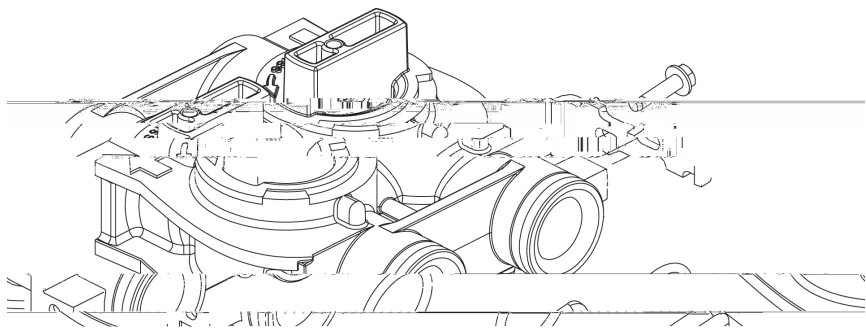

Item No.	QTY	Part No.	Description
----------	-----	----------	-------------

BYPASS VALVE ASSEMBLY (METAL)

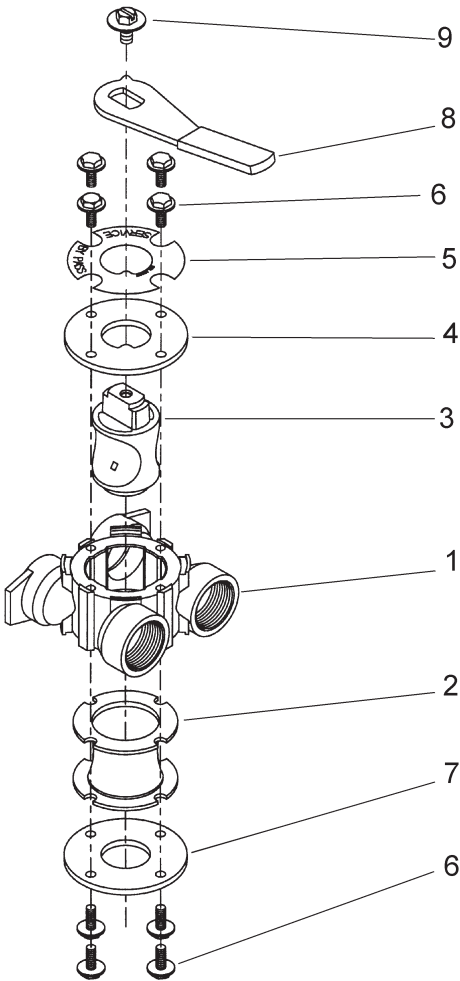


Item No.	QTY	Part No.	Description
----------	-----	----------	-------------

2300 SAFETY BRINE VALVE



Item No.	QTY	Part No.	Description
----------	-----	----------	-------------

2310 SAFETY BRINE VALVE

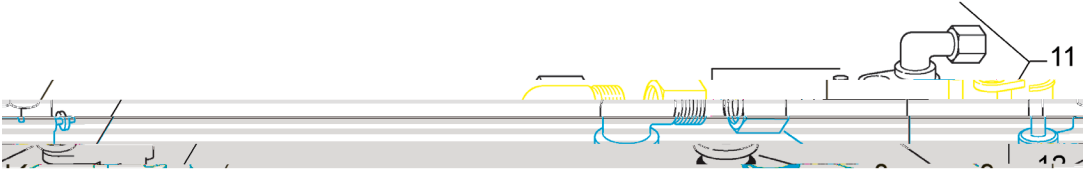

Item No.	QTY	Part No.	Description
----------	-----	----------	-------------

TROUBLESHOOTING

Problem	Cause	Correction
	Insufficient water flowing into brine tank.	Check brine tank fill time and clean brine line flow
		Repeated flushings of the hot water tank is
	Improperly sized drain line flow control.	
		Check backwash, brine draw, and brine tank fill.
	Plugged drain line flow control.	Clean flow control.
	Foreign material in brine line flow control.	Clean brine line flow control.
	Drain line flow control is plugged.	Clean drain line flow control.
Drain flows continuously.		

TROUBLESHOOTING

Error Codes


NOTE: Error codes appear on the In Service display.

Error Code	Error Type	Cause	Reset and Recovery
			If the system is metered, verify that it is measuring flow by running service water and watching for the flow indicator on the display. If the unit does not measure flow, verify that the meter cable is connected properly and that the Enter a Master Programming Mode and verify that the unit is configured properly. As appropriate for the valve configuration, check that the correct and that meter is identified correctly. If the unit is configured as a Day-of-
			Perform a Master Reset and reconfigure the system via Master Programming Mode. After reconfiguring the system, step the valve through a manual


WATER CONDITIONER FLOW DIAGRAMS

Single Backwash Positions Black Cycle Cam (Part Number 17438)	Double Backwash Positions Blue Cycle Cam (Part Number 40609)


Service Position

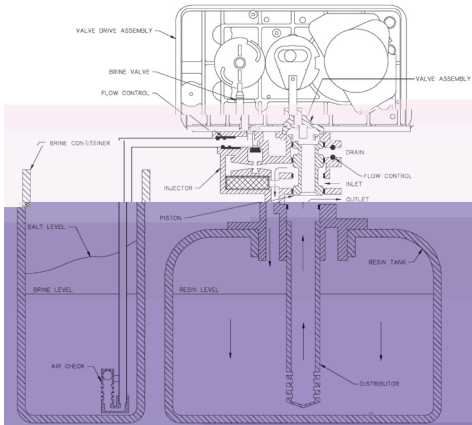


Backwash Position

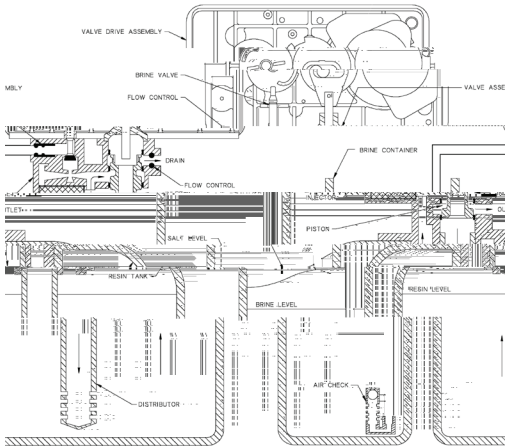


Brine/Slow Rinse Position

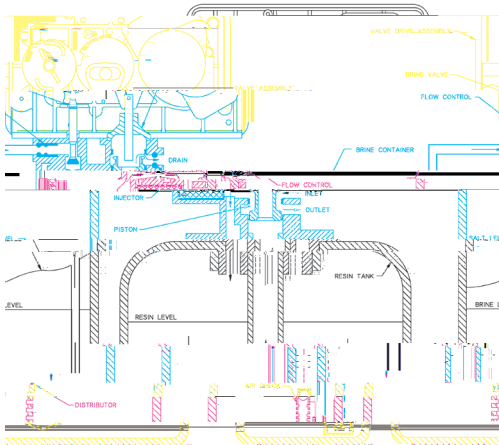

Second Backwash Position (Double Backwash Units Only)

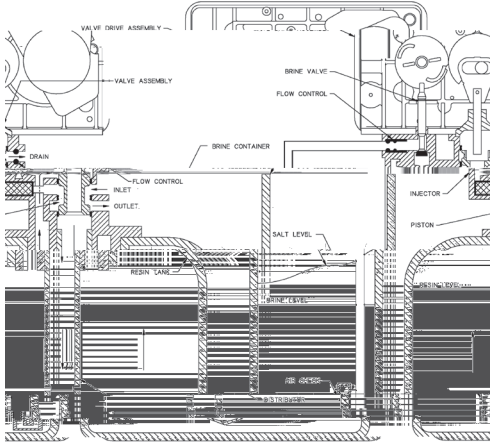


Rapid Rinse

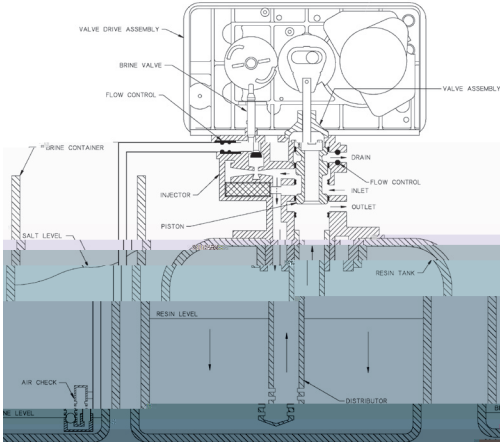

Brine Tank Fill Position



WIRING DIAGRAM

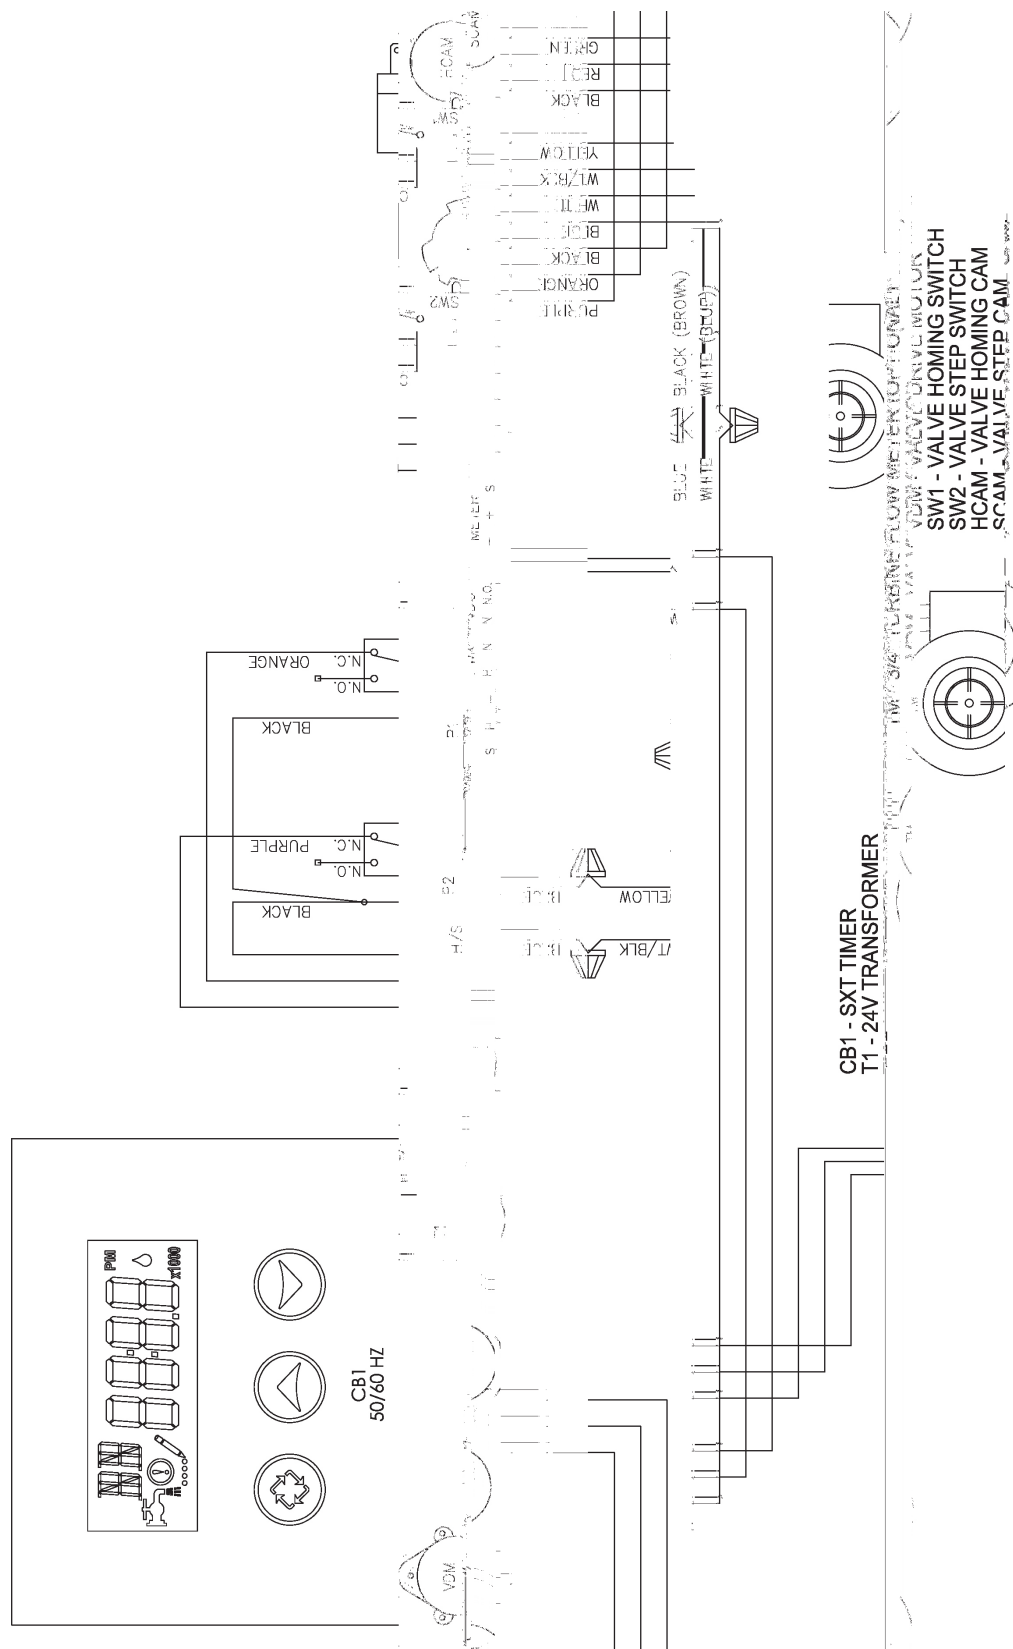

NOTE:

1. WIRING ON APPLICATION VALVE STEP CAM AVAILABLE FROM FLECK
2. REGARDLESS OF CAM TYPE USED, WIRING TO SWITCHES SW1 AND SW2

SERVICE INSTRUCTIONS

Replacing Brine Valve, Injectors and Screen

system, first open the valve in the bypass line, then close

Timer Replacement

NOTE: Be sure to shut off any bypass line.

Brine Valve Replacement

Piston Assembly Replacement

bushing is flush with injector body.

Injectors/Screen Replacement

NOTE: Be sure to shut off any bypass line.

NOTE: Be sure to shut off any bypass line.

SERVICE INSTRUCTIONS

Seal and Spacer Replacement

NOTE: Be sure to shut off any bypass line.

Meter Replacement

sure clip legs are firmly engaged with lugs.

NOTE: Be sure to shut off any bypass line.

SERVICE ASSEMBLIES

Air Check

Meter

Brine Line Flow Controls

Brine Line Flow Control Washers

Brine Valve Assembly

Bypasses

Drain Line Flow Control Washers

Floats

Front Panels

5600SXT Front Panel Assembly,

5600SXT Front Panel Assembly,

Injector
60084-XXXX

Injector	#	DLFC	#	BLFC	#
----------	---	------	---	------	---